

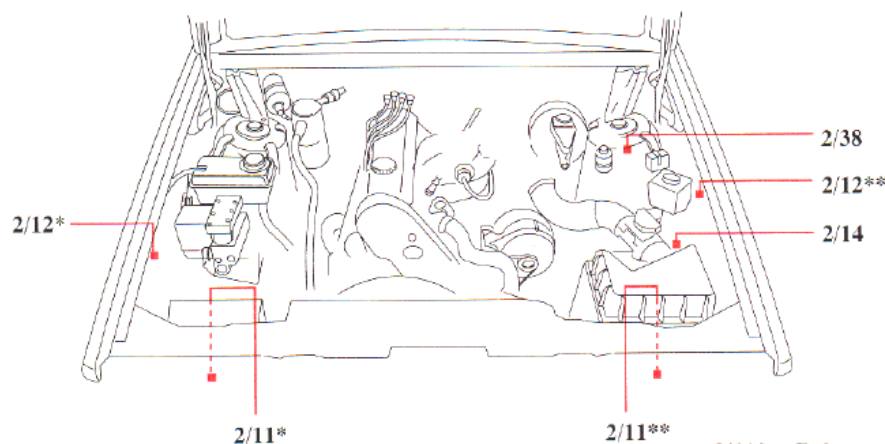


1994 940 Relay Locations

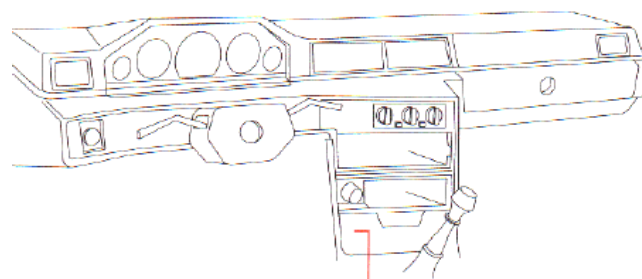

- 2/11* Relay, engine cooling fan (B 200 F/G, B 230 F/FB/FD/G)
- 2/11** Relay, engine cooling fan (B 200 FT, B 230 FT/GT)
- 2/12* Relay, interference suppression (B 200 F/G, B 230 F/FB/FD/G)
- 2/12** Relay, interference suppression (B 200 FT, B 230 FT/GT)
- 2/14 Relay, glow plug (D 24 TIC)
- 2/38 Timer relay, exhaust feedback EGR (D 24 TIC)

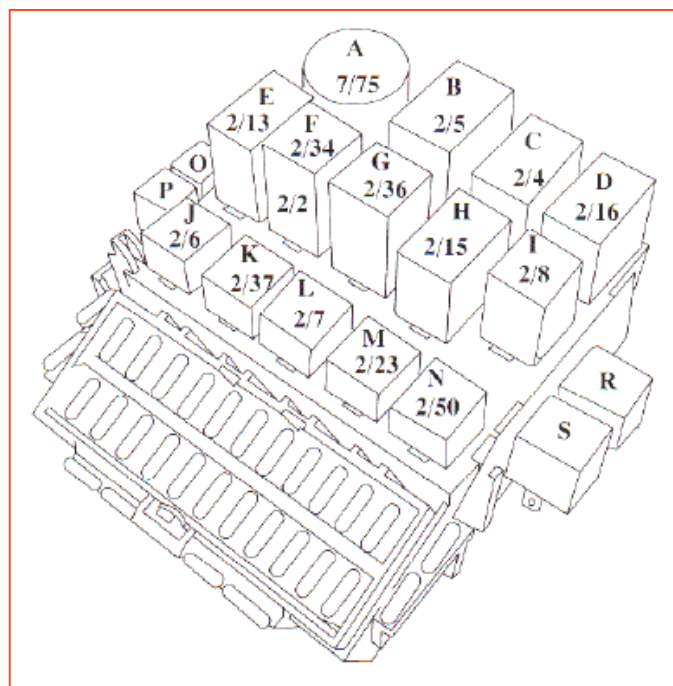

- A Bulb failure warning sensor (7/75)
- B Seat belt reminder/key warning (2/5)
(USA, Canada, Korea)
- C Windshield wiper intermittent relay (2/4)
- D Tailgate wiper intermittent relay (2/16)
- E Fuel injection (2/13)
- F Foglights, front (2/34 or 2/2 USA, Canada)
- G Headlight flasher (2/36)
- H Exhaust temp. sensor (2/15) (Japan)
- I Overdrive (2/8)
- J Overload relay 15I (2/6)
(power windows/seat heater)
- K Headlight (2/37)
- L Central lock (2/7)
- M Fuel pump relay (2/23)
- N Overload relay high beam (2/50)
(not USA, Canada)
- O -
- P -
- R -
- S -